 




## **X-Treme™ Electric Scooters**

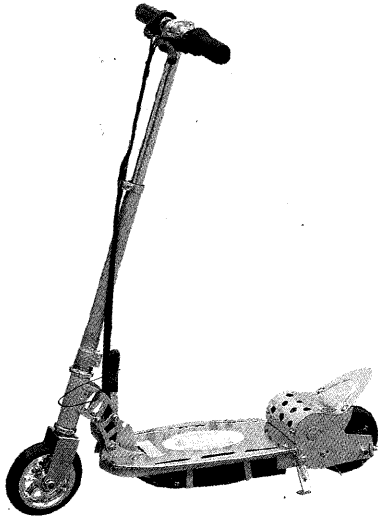

**Model X-140**

## **Product Handbook**

**PLEASE BE SAFE WHEN RIDING  
ALWAYS WEAR A HELMET AND OBEY ALL LAWS!**





# IMPORTANT



## **BATTERY MAINTENANCE and CHARGING INSTRUCTIONS:**

1. You **MUST** Charge completely prior to initial use. (Follow charging instructions in your Product Handbook).
2. Charge immediately after every use.
3. Charge before storage. You must charge every 30 days if not in use.
4. Charge the unit for 6-8 hours after the light on the charger turns green.
5. **DO NOT** allow this unit to Deep Discharge.
6. For safety purposes, **DO NOT** charge for over 24 hours.
7. Turn the unit **OFF** when not in use.

**Failure to follow proper CHARGING INSTRUCTIONS will  
VOID YOUR WARRANTY!**

**This PRODUCT IS NOT INTENDED FOR EXTREME or  
OFF-ROAD Use! Please take care of your scooter!**

**DO NOT JUMP or ABUSE THIS PRODUCT!**

**DO NOT RIDE IN WET CONDITIONS!**

**Failure to follow these instructions completely will  
VOID YOUR WARRANTY!**

# IMPORTANT

PLEASE READ THIS BEFORE USING THIS PRODUCT

**READ THIS FIRST!**

## **WARNING**

This product does not conform to Federal Motor Vehicle Standards and is not intended for operation on public streets, roads or highways. Serious injury can result from the unsafe operations of this product. Operator can minimize these risks by using certain safety equipment such as: safety helmet, goggles, gloves, elbow and kneepads and appropriate footwear.

DO NOT operate this product in traffic, on wet, frozen oily or unpaved surfaces or under the influence of drugs and/or alcohol. Avoid uneven surfaces, potholes, surface cracks and obstacles.

 
DO NOT use a water hose to clean this product. See Product Handbook for more information.

This product is recommended for riders 16 YEARS OF AGE and older.

## **SAFETY**

- This product should not be used by persons without excellent vision, balance, coordination, reflex, muscle and bone strength and good decision-making capabilities.
- This product should not be used by minors without adult supervision.
- This product should not be used by persons unwilling or unable to take responsibility for their own actions.
- The user of this product assumes ALL risks associated with its use. To minimize these RISKS, the user must wear safety helmet, goggles, gloves, elbow and knee pads and appropriate footwear.
- This product is ELECTRIC! DO NOT Ride this product in wet conditions, puddles or rainy weather.

## GETTING TO KNOW YOUR X-TREME SCOOTERS

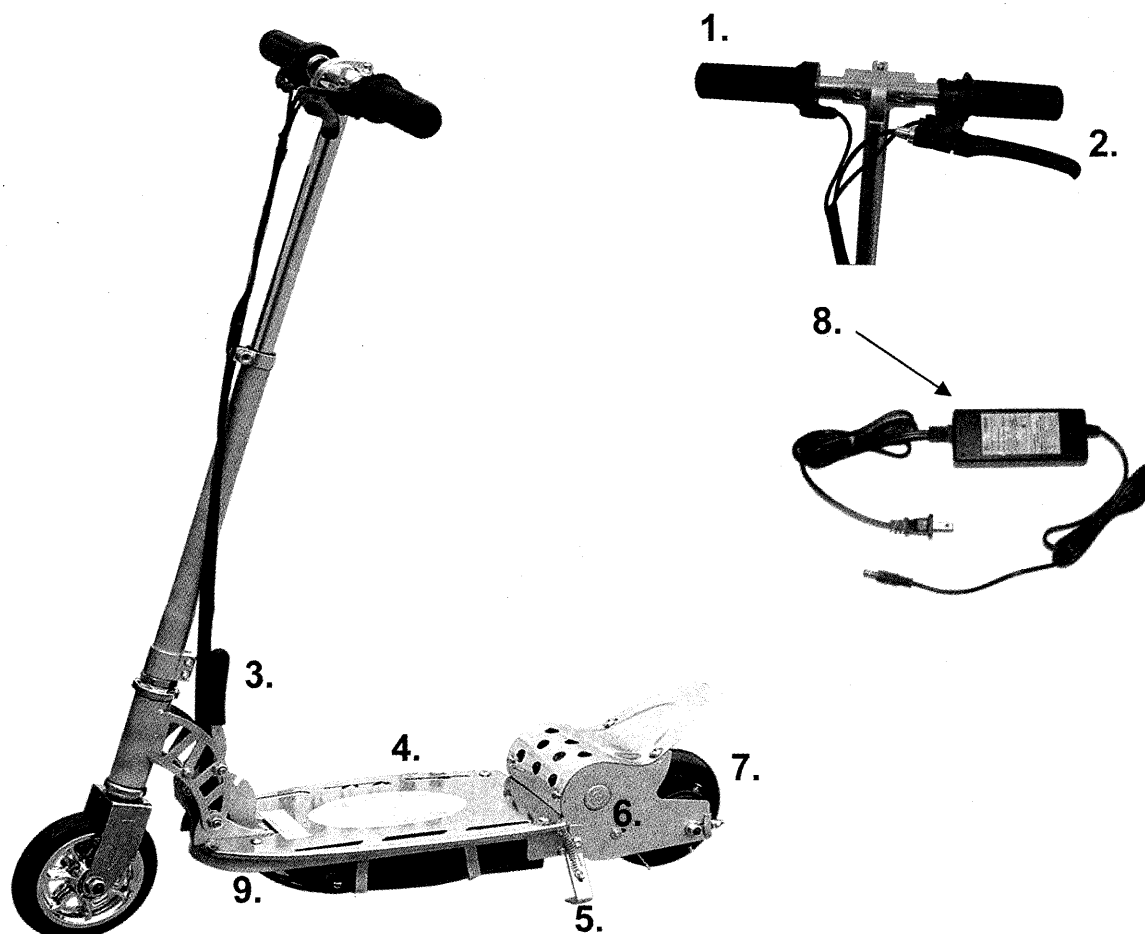

Before operating your X-Treme X140 electric scooter, please familiarize yourself with the following features:

- |                      |                    |
|----------------------|--------------------|
| 1. Accelerator Lever | 7. Rear Drum Brake |
| 2. Brake Lever       | 8. 1 Amp Charger   |
| 3. Folding Handle    | 9. Charging Port   |
| 4. Deck              |                    |
| 5. Kickstand         |                    |
| 6. 140W DC Motor     |                    |

## **BOX CONTENTS**

Your X-Treme X140 should come complete with:


1. X-Treme X140 Electric Scooter
2. AC Wall Charger
3. Allen Wrench
4. Instruction Manual

## **GETTING STARTED**

**YOUR SCOOTER WILL COME CHARGED OUT OF THE BOX BUT YOU MUST CHARGE YOUR X140 FOR 6-8 HOURS EVEN IF BOTH LIGHTS ON THE CHARGER ARE GREEN PRIOR TO FIRST USE!**


### **Before You Ride**

 **Fig. 1**

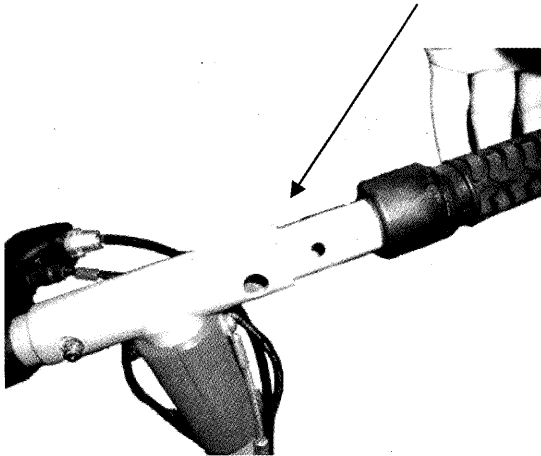

1. The 140 is shipped with the Handlebars unattached.
2. You need to insert the accelerator and brake levers into the handlebars. To insert, remove the screws from the handlebar, then insert the right and left handle and align the holes. (Fig. 1). Then insert the screws through the holes and tighten the nuts. (Fig. 2).
3. \*Note: The Accelerator Lever (the one with the shorter lever) goes on the right, the Brake Lever goes on the left.

 **Fig. 2**

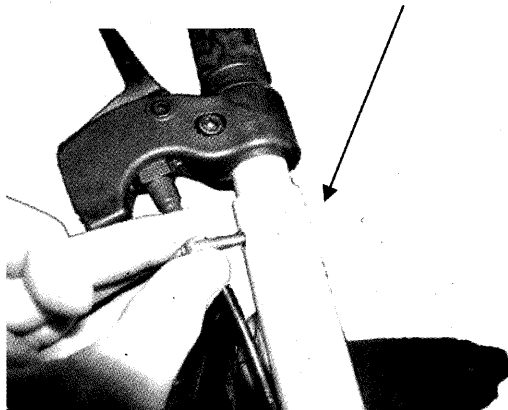

4. Make sure all of the bolts are tightened. Also make sure to insert the bolts in the correct way with the nuts on the back side of the handlebars as in Fig. 2

## **Batteries**

The X140 comes with 2 12V-4.5Ah batteries. The batteries are located under the deck. If you have any questions about your batteries you can contact us here at X-Treme. You can visit our website at [www.x-tremescooters.com/support/](http://www.x-tremescooters.com/support/)


## **CHARGING SYSTEM**

This unit comes standard with a regulated 24V charger.

\* Note that it is not advisable to leave your scooter plugged in for more than 24 hours.

### **Charging**

 
**Fig. 3**

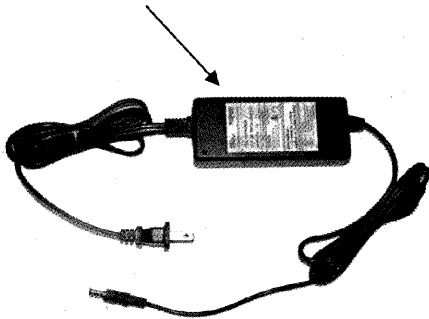

1. The scooter comes with a 1 amp charger (Fig. 3). To charge your scooter, plug the adapter into the charging jack on the scooter (Fig. 4) and plug the charger into the wall. One green LED will light indicating that the charging cycle has begun. When the batteries are fully charged you will see two green LED's light up. Your X140 is ready to ride.

\*Note: Full charging takes approx. 6-8 hours from full discharge. It is recommended that you charge your scooter after each use.

 **Fig. 4**

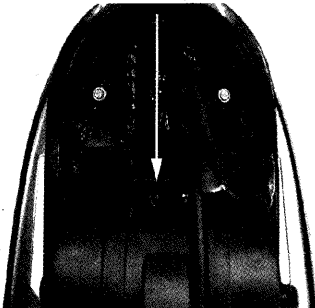

\*It is recommended on your initial charge that you charge the batteries for 6-8 hours even if both lights on the charger are lit.

### **Unfolding**

 
1. To unfold the X140 begin by pressing down on the FOLDING HANDLE with one hand while gently pulling up on the handlebar with the other hand.
2. Fully extend the handlebars to their upright position until you feel the mechanism lock into place.

## **Riding**

1. Make sure that all of the bolts and screws are tightened.
2. Raise the kickstand to its upright position.
3. The X140 has an on/off switch on left side. To ride, put one foot on the deck of the 140. After pushing off with the other foot, squeeze the ACCELERATOR LEVER on the right side of the handlebars. The scooter will begin to move under its own power. You must reach approximately 2 mph to activate the motor.
4. To stop, release the accelerator handle and depress the BRAKE LEVER (on the left side of the handlebars). Depressing the brake will temporarily disengage power to the motor.
5. When you feel your scooter moving slow, sluggish or running out of power, it is time to recharge.

\*Note that there is still a charge in the batteries but it is not advisable to fully discharge the batteries.

## **FOLDING AND STORAGE**

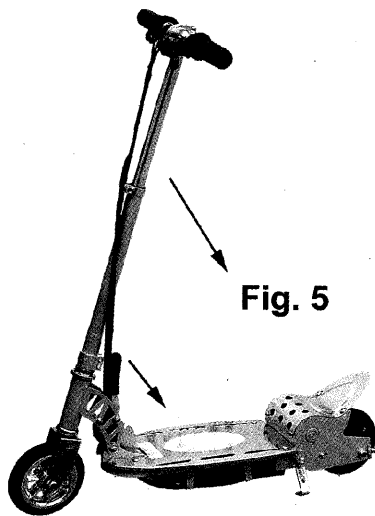


To fold down the X140, use one hand to pull back on the FOLDING HANDLE, while using the other to gently pull down on the handlebars. (Fig. 5) BE CAREFUL NOT TO HIT YOUR HEAD WITH THE HANDLEBAR. Push down until you feel the mechanism lock into place.

**Always charge your X-Treme X140 fully prior to storage!**



## **Belt Adjustment**

The belt may need to be adjusted from time to time. Please follow the directions below to adjust your belt.

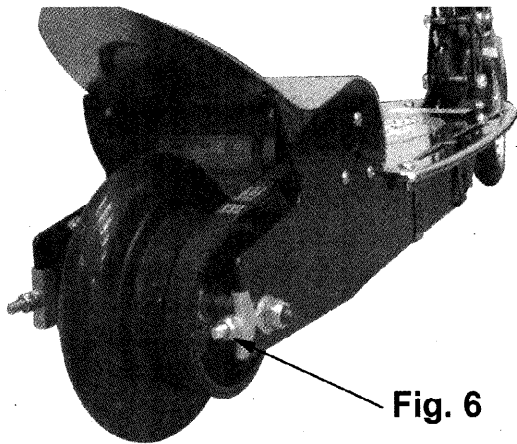 

**Fig. 6**

1. Use a 16mm wrench to loosen the axle bolts. Once the axle bolts are loose, use a 10mm wrench to loosen the tension bolts behind the rear wheel of the ION and move the rear wheel backwards to remove the slack from the belt (Fig. 6).
2. Once this is achieved the wheel nuts must then be relocked into position and wheel alignment must be checked (while turning the wheel, visually check that the clearance between the wheel and the frame parts have clearance).

## **TROUBLESHOOTING GUIDE**

The following guide will help assist you in identifying and correcting common problems with your X140:

<b>Symptoms</b>	<b>Potential Causes:</b>	<b>Solutions:</b>
Both lights on the charger turn green right away.	THIS IS NOT A PROBLEM! IONs come charged out of the box.	Charge your scooter for an additional 6-8 hours prior to initial use.
Charger is plugged in, but the second light on the charger never turns on.	Your 140 has gone into deep discharge and cannot identify charge status.	Charge the scooter for 6 to 8 hours to bring the scooter out of deep discharge.
The 140 does not hold the charge long enough.	The sealed lead acid batteries have reached the end of their life and will need to be replaced	Replace batteries. Call Bladez for replacement information.
My 140 'sputters' or accelerates very slowly	Your battery is running out of charge.	Recharge your X140.

# ENJOY YOUR RIDING!

For General Information or Parts visit [www.x-tremescooters.com](http://www.x-tremescooters.com)

For Technical support or assistance visit [www.x-tremescooters.com/support/](http://www.x-tremescooters.com/support/)

DO NOT RETURN THIS ITEM TO THE STORE WHERE IT WAS PURCHASED FROM

If you need assistance, go to [www.x-tremescooters.com/support/](http://www.x-tremescooters.com/support/)